


# FMS 1.2 User Guide

## ● Installation


1. Double click fms.exe icon to start the installer.




2. Specify the installation directory in the following installer window:

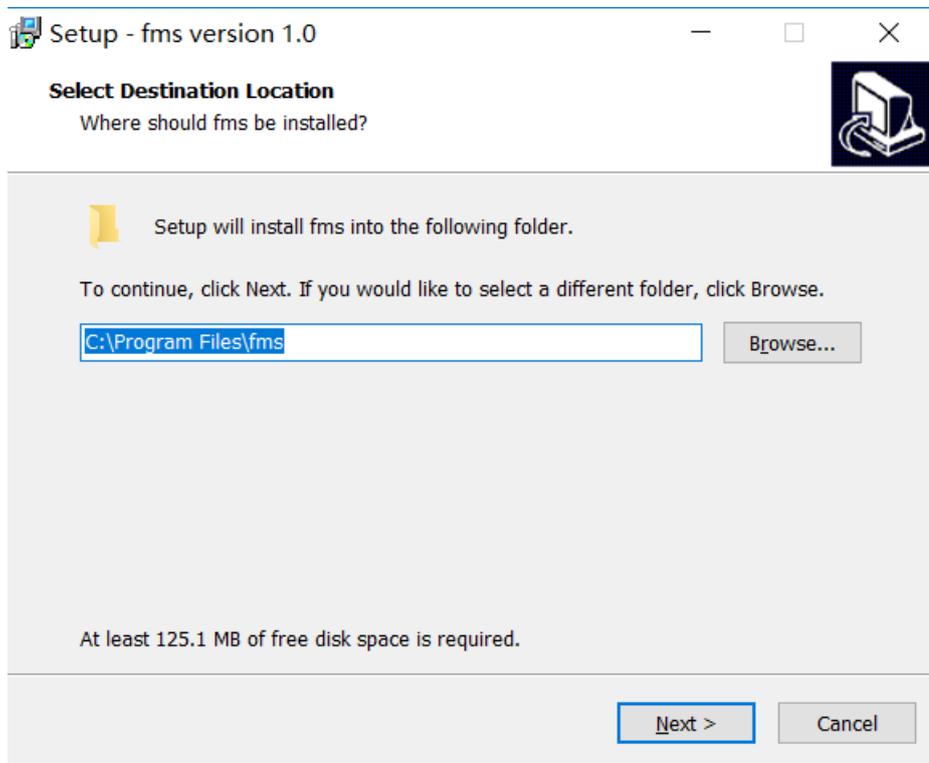


3. Click Next:

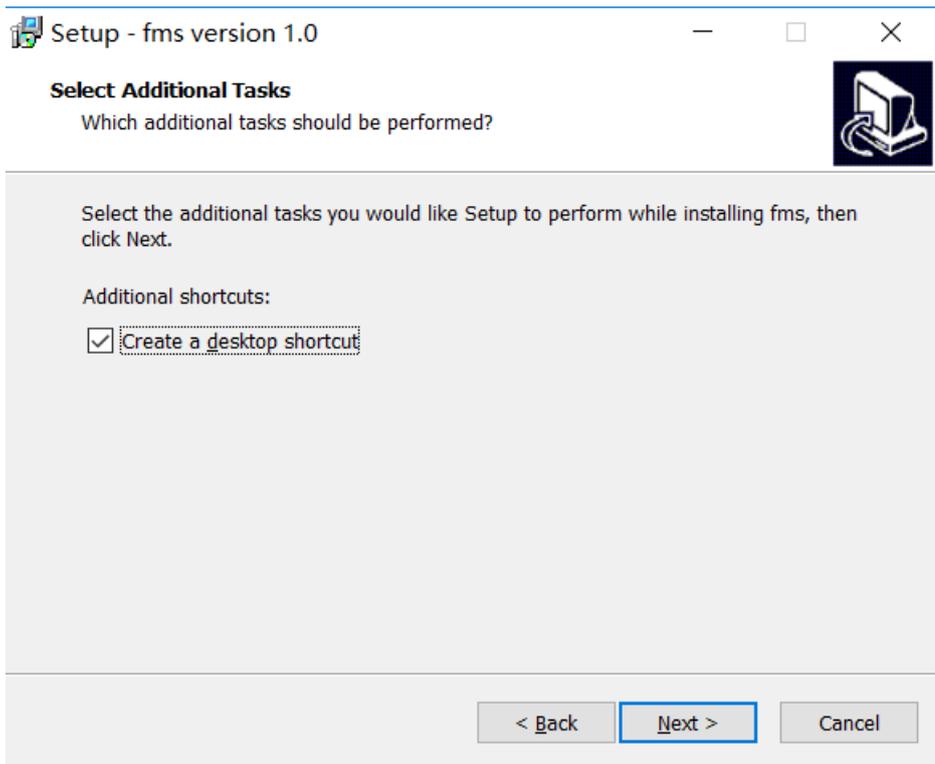


4. Click Next:

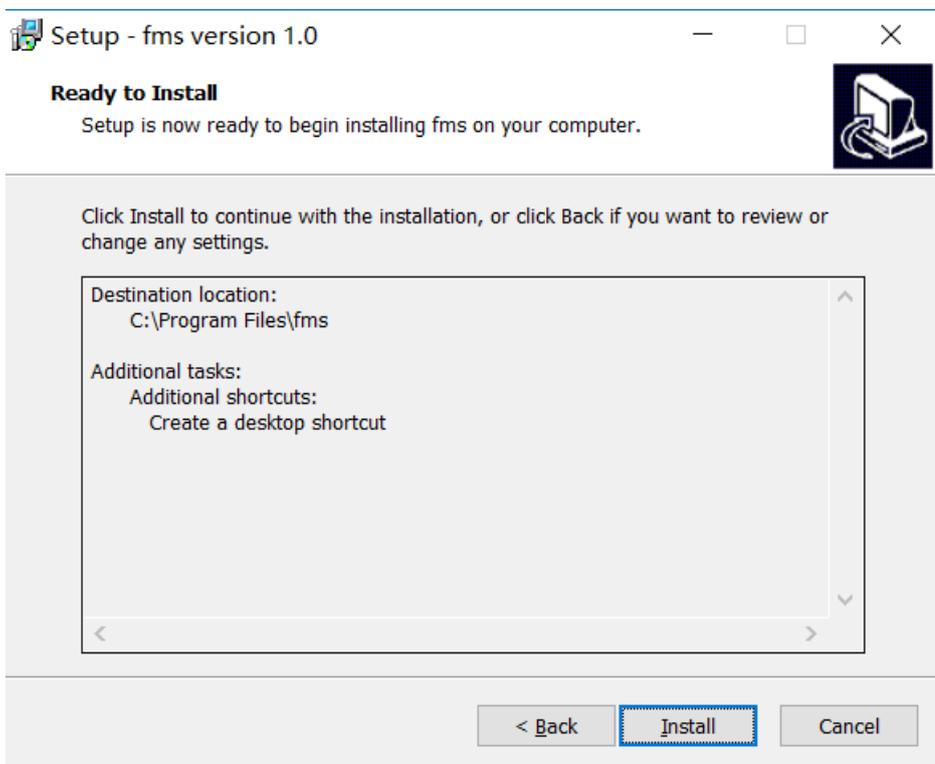

5. Click Install to start installation:

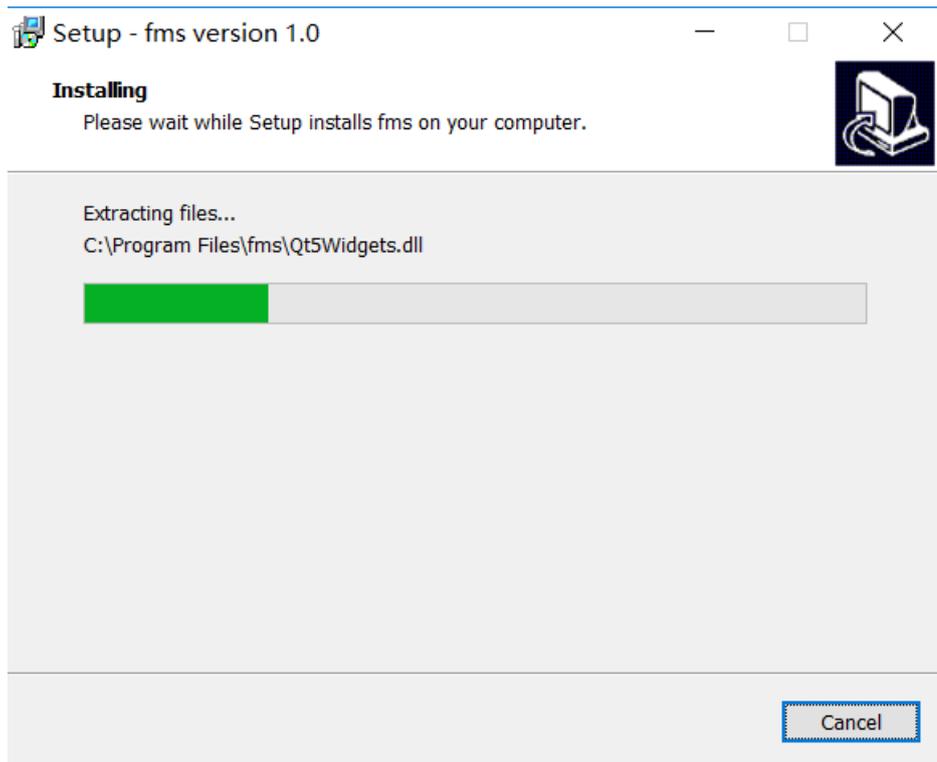

Once the progress is completed:

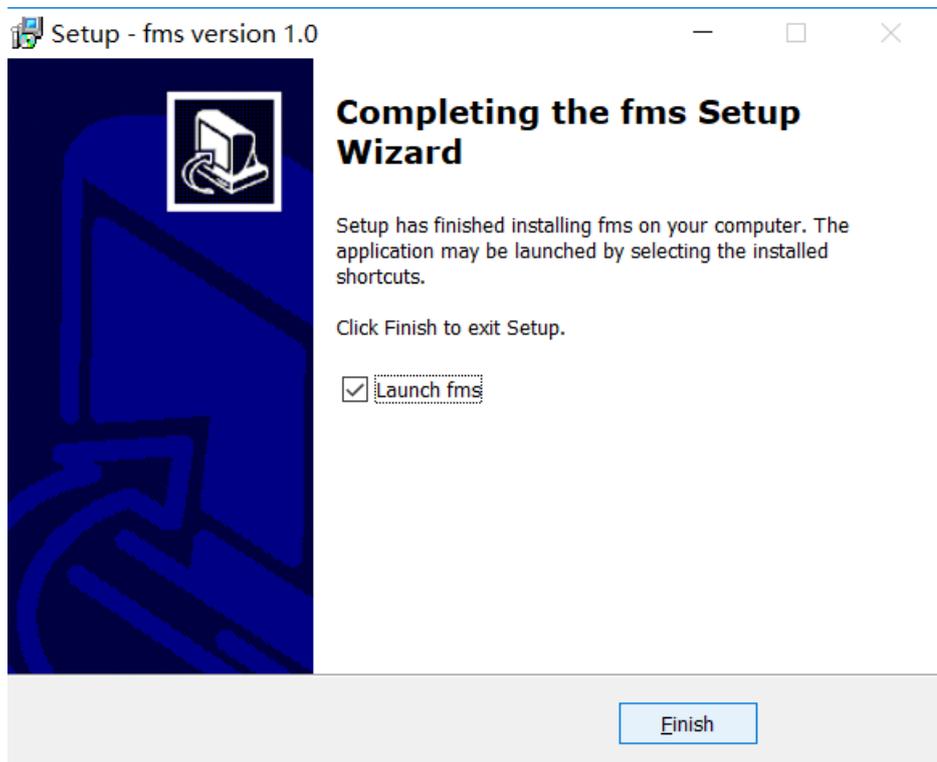


Click finish to finish the installation.

- User interface Introduction



1. Double click the desktop icon to enter FMS:

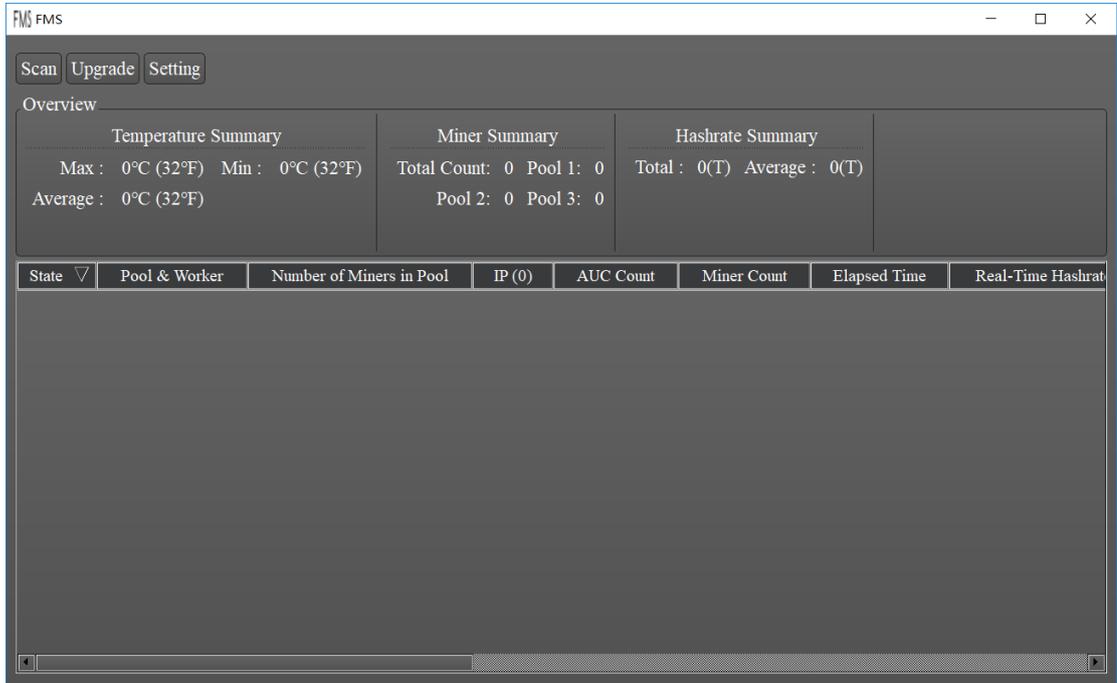

<b>Scan</b>		manual scanning
<b>LED ON</b>		Batch turn on LED
<b>LED OFF</b>		Batch turn off LED
<b>Upgrade</b>		firmware upgrade
<b>Restart</b>		Batch restart miners
<b>Change Pool</b>		Batch change pool setting
<b>Setting</b>		change settings
Temperature Summary Max : 0°C (32°F)      Min : 0°C (32°F) Average : 0°C (32°F)		temperature monitoring


<table border="1"> <thead> <tr> <th colspan="4">Miner Summary</th> </tr> </thead> <tbody> <tr> <td>Total Count:</td> <td>0</td> <td>Pool 1:</td> <td>0</td> </tr> <tr> <td>Pool 2:</td> <td>0</td> <td>Pool 3:</td> <td>0</td> </tr> </tbody> </table>	Miner Summary				Total Count:	0	Pool 1:	0	Pool 2:	0	Pool 3:	0		miner monitoring
Miner Summary														
Total Count:	0	Pool 1:	0											
Pool 2:	0	Pool 3:	0											
<table border="1"> <thead> <tr> <th colspan="4">Hashrate Summary</th> </tr> </thead> <tbody> <tr> <td>Total :</td> <td>0(T)</td> <td>Average :</td> <td>0(T)</td> </tr> </tbody> </table>	Hashrate Summary				Total :	0(T)	Average :	0(T)		hash rate monitoring				
Hashrate Summary														
Total :	0(T)	Average :	0(T)											

The State column provides checkboxes to select or unselect each miner for other operations (like firmware Upgrade). The Pool & Worker column shows the mining pool and miner ID.


## ● Usage

### 1. Miner Discovery


If the miners and the management PC are in the same network, use the following procedure to discover the miners. Click Settings to bring up the Base Config window:

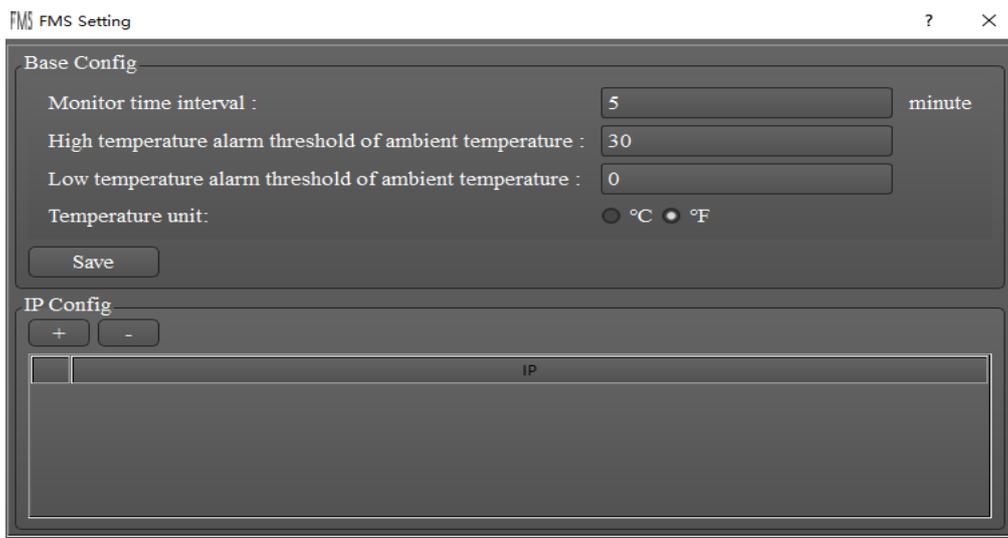

Click "+" button and enter the subnet IP range for the miners (e.g. 192.168.193.1-192.168.193.255), and click Confirm to auto-discover the miners.

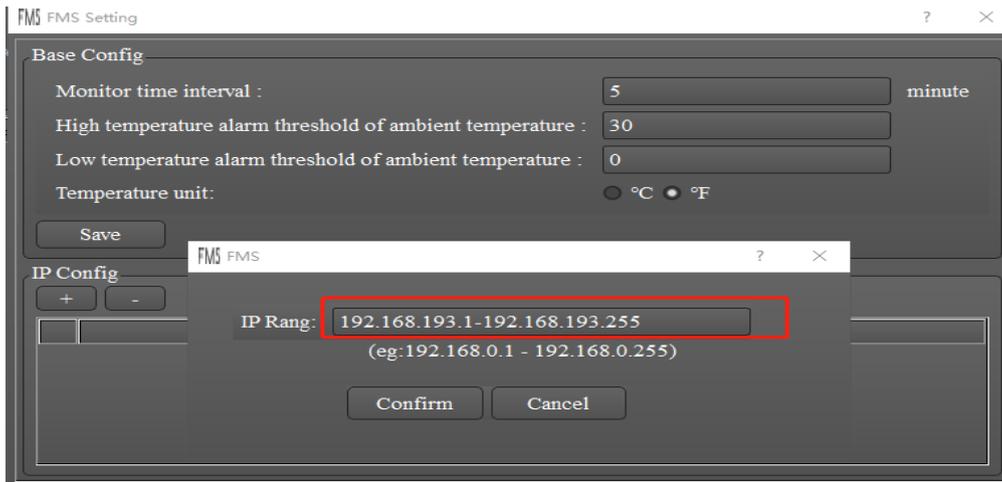


Select miners and click **Save**, the discovered miner IP addresses will be shown in the main window:

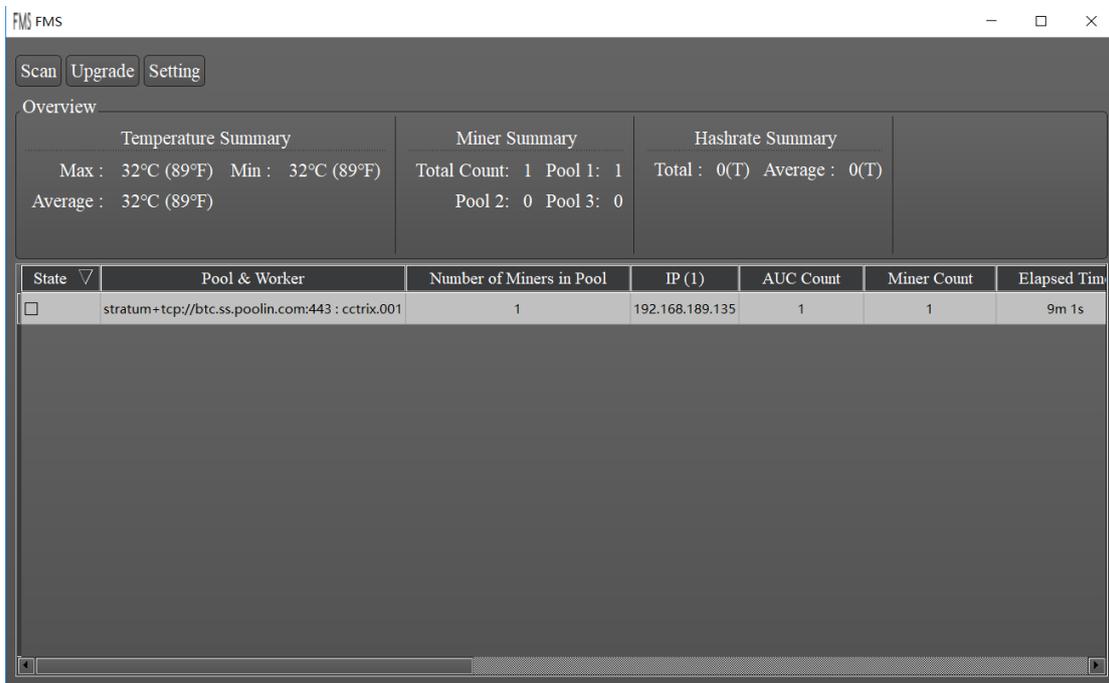


## 2. Firmware Upgrade


Select the miner to be upgraded in the main window, and click Upgrade

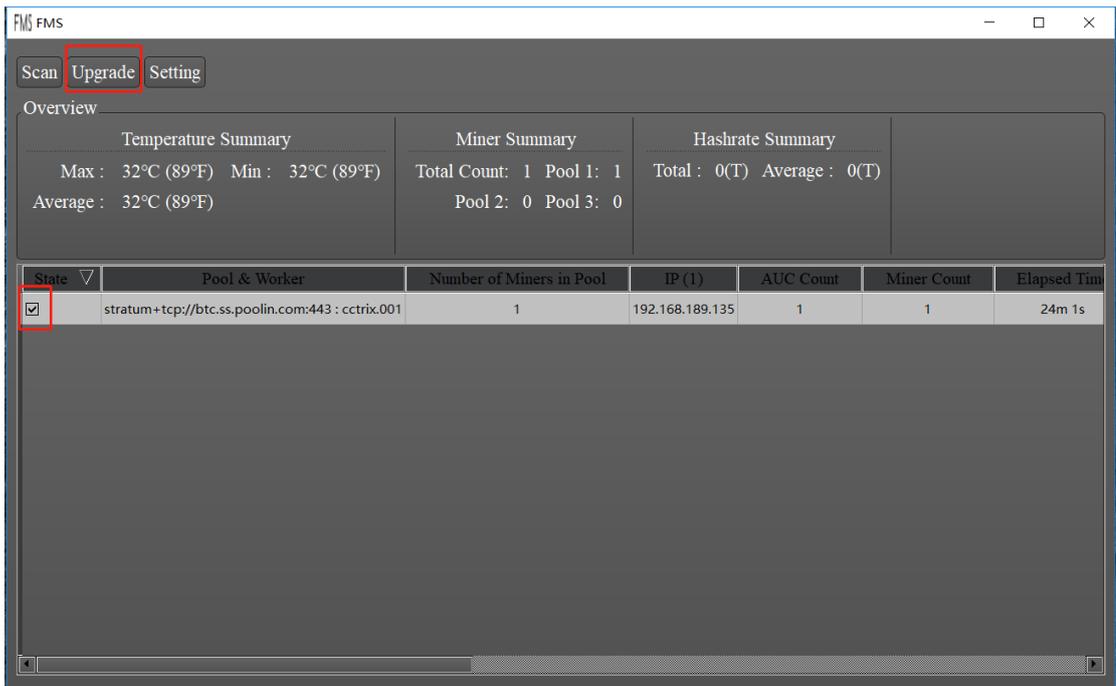


Select the firmware file in the popup window:

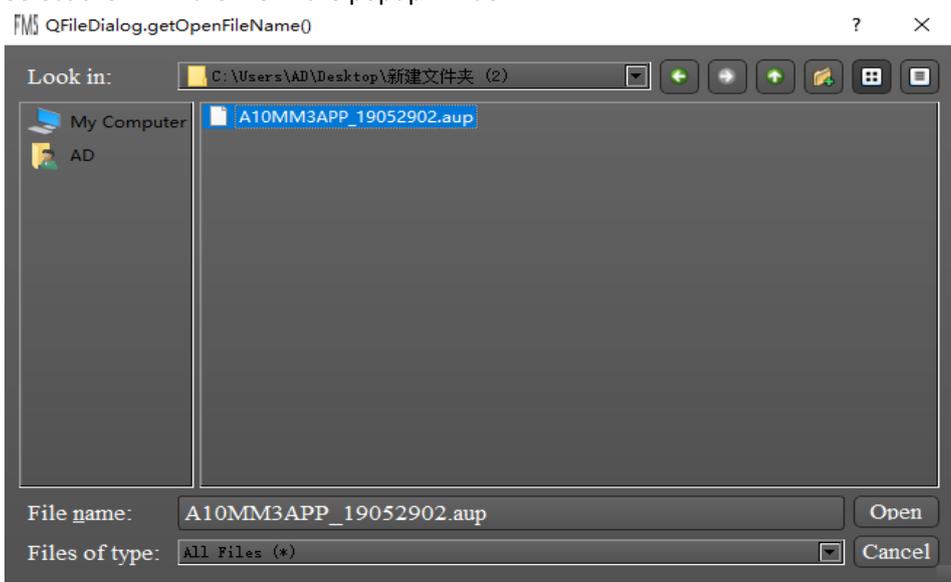

Click Open to begin the upgrade process.

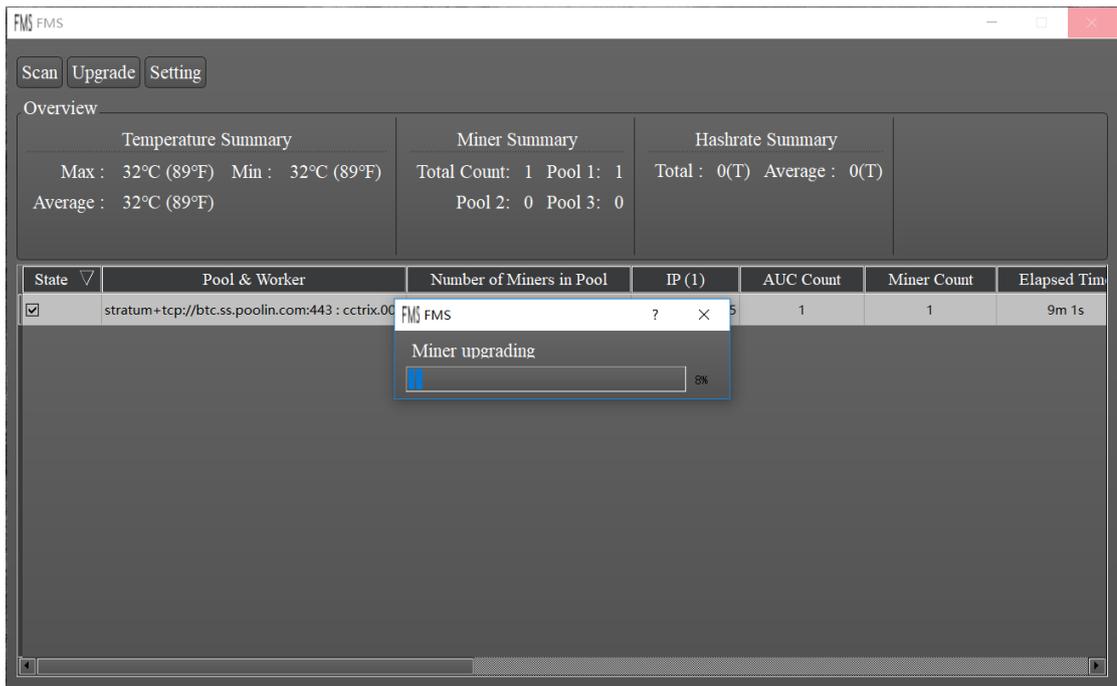

The following dialog will be shown if the upgrade is successful:

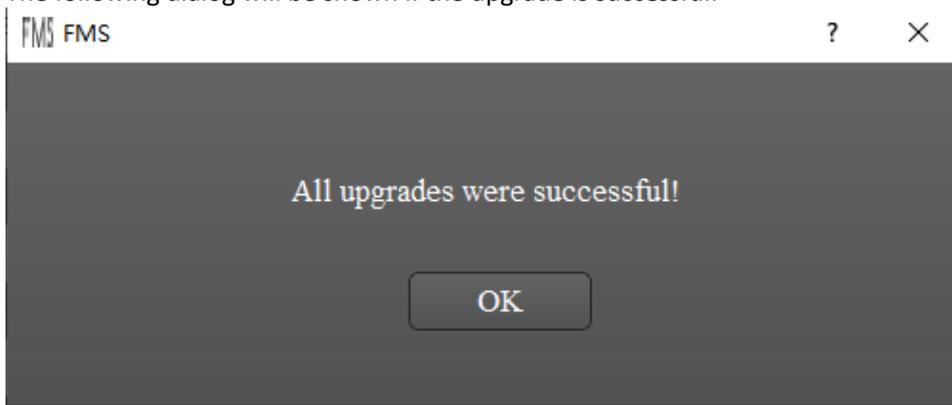

### 3. Batch Turn On/Off LED

First select one or multiple miners from table by clicking the checkbox of state column. Then click LED ON or LED OFF button to switch LED for selected miners. During the process, a progress dialog will popup. When the progress dialog finish, it means LED switching operation finish and a result dialog will popup.

### 4. Batch Restart

First select one or multiple miners from table by clicking the checkbox of state column. Then click Restart button to restart all selected miners. During the process, a progress dialog will popup. When the progress dialog finish, it means restart operation finish and a result dialog will popup. After restarted, these miners need some time to initialize and probably don't appear in FMS until they begin mining.

### 5. Batch Change Pool

First select one or multiple miners from table by clicking the checkbox of state column. Then click Change Pool button to change pool setting for all selected miners. A pool setting dialog will popup to allow users choose which pool they want to use. After conform, FMS will start to change pool setting for selected miners and restart them. During the process, a progress dialog will popup. When the progress dialog finish, it means changing operation finish and a result dialog will popup. After restarted, these miners need some time to initialize and probably don't appear in FMS until

they begin mining.

## 6. Version of FMS

Two ways to find out version of FMS:

### 1) top left corner of the main page

Temperature Summary  
Max : 37°C (98°F) Min : 31°C (87°F)  
Average : 34°C (93°F)

Miner Summary  
Total Count: 6 Pool 1: 5  
Pool 2: 1 Pool 3: 0

Hashrate Summary  
Total : 183(T) Average : 30(T)

State	Pool & Worker	Number of Miners in Pool	IP (6)	AUC Count	Miner Count	Elapsed Time
<input type="checkbox"/>	stratum+tcp://btc.ss.poolin.com:443 : cctrix.001	1	192.168.193.24	1	1	1d 19h 50m 2
<input type="checkbox"/>	stratum+tcp://btc.ss.poolin.com:443 : cctrix.001	1	192.168.193.16	1	1	5m 10s
<input type="checkbox"/>	stratum+tcp://btc.ss.poolin.com:443 : cctrix.001	1	192.168.193.20	1	1	2m 59s
<input type="checkbox"/>	stratum+tcp://btc.ss.poolin.com:443 : cctrix.001	1	192.168.193.221	1	1	2d 21h 13m 4
<input type="checkbox"/>	stratum+tcp://btc.ss.poolin.com:443 : cctrix.001	1	192.168.193.220	1	1	22h 1m 41s
<input type="checkbox"/>	stratum+tcp://stratum.bixin.com:3333 : bixin.001	1	192.168.193.27	1	1	15h 38m 31s

### 2) details in the installation package properties

fms.exe 属性

常规 兼容性 安全 详细信息 以前的版本

属性	值
说明	
文件说明	fms Setup
类型	应用程序
文件版本	1.0.0.0
产品名称	fms
产品版本	1.0
版权	
大小	83.4 MB
修改日期	2019/7/11 11:02
语言	语言中性

删除属性和个人信息

确定 取消 应用(A)